002-049-J Installation

002-049 Is Not Included and must be purchased separately

1. Disconnect the positive cable from the battery to remove power from the truck.
2. Use a small screwdriver to pop the 002-049 front connector cap off.

3. Use a small pick / wire / etc to push the white plugs out of the #3 & #6 positions.

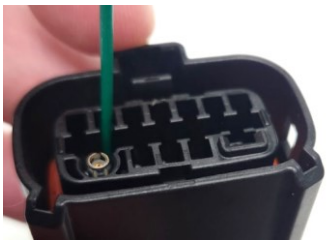

4. Plug the pink wires (terminal first) into the connector from the back side as shown below. Then replace the white connector cap back into the connector.

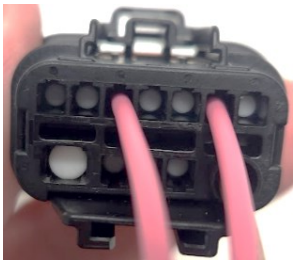

5. Plug the 002-049 and 002-049-J connectors into the OEM Tailgate connections at the rear of the vehicle
6. Reconnect the positive battery terminal and test the function of the system.

All Rights Reserved Zorg North America LLC. WWW.ZORG-NA.COM

002-049-J Form	Edited - 6/23/2026	Rev. 2